


**WE ARE ADDING
TO OUR LINE OF
BRACKETS!
BATHROOM
COUNTERTOP
BRACKETS
NOW AVAILABLE**



**SUPERIOR
STRENGTH
STEEL**



A & M HARDWARE, INC.
2705 Mount Joy Road
Manheim, PA 17545

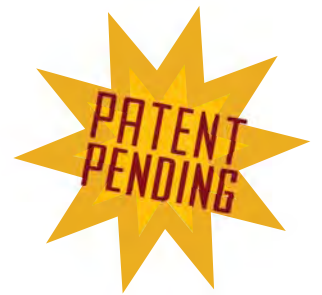

A&M HARDWARE, INC.

Call To Order (888) 647-0200
www.AandMhardware.com

NEW ADA BATHROOM COUNTERTOP BRACKETS



**ACCOMMODATES
22" TO 26"
COUNTERTOPS
BLOCKING
MAY BE USED FOR
LARGER
SIZES**

A&M HARDWARE, INC.

Call To Order (888) 647-0200

2705 Mount Joy Road, Manheim, PA 17545 | Fax: (717) 653-5874

www.AandMhardware.com

**A & M HARDWARE INC
2705 MOUNT JOY ROAD
MANHEIM, PA 17545
888-647-0200**

www.AandMhardware.com

ADA Mounting Instructions

Mount ADA Brackets to the wall.

Note: Double studs are recommended for a stronger installation

Note: Use ADA bowls when using the ADA Brackets

Install Spring Clips to the back of the Face Board

Spring Clips should be installed with 12 $\frac{3}{4}$ inches between the top of the top bracket and the top of the bottom bracket

There will be some side to side allowance on the clip installation

Be sure to allow 1" clearance between the top of your Face Board and the bottom of the top portion of the bracket to allow the Face Board to slide up for removal