


**WE ARE ADDING  
TO OUR LINE OF  
BRACKETS!  
BATHROOM  
COUNTERTOP  
BRACKETS  
NOW AVAILABLE**



**SUPERIOR  
STRENGTH  
STEEL**



**A & M HARDWARE, INC.**  
2705 Mount Joy Road  
Manheim, PA 17545

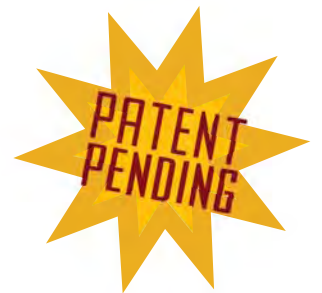

**A&M HARDWARE, INC.**

**Call To Order (888) 647-0200**  
[www.AandMhardware.com](http://www.AandMhardware.com)

**NEW ADA BATHROOM COUNTERTOP BRACKETS**



**ACCOMMODATES  
22" TO 26"  
COUNTERTOPS  
BLOCKING  
MAY BE USED FOR  
LARGER  
SIZES**

**A&M HARDWARE, INC.**

**Call To Order (888) 647-0200**

2705 Mount Joy Road, Manheim, PA 17545 | Fax: (717) 653-5874

[www.AandMhardware.com](http://www.AandMhardware.com)

**A & M HARDWARE INC  
2705 MOUNT JOY ROAD  
MANHEIM, PA 17545  
888-647-0200**

[www.AandMhardware.com](http://www.AandMhardware.com)

---

## **ADA Mounting Instructions**

Mount ADA Brackets to the wall.

Note: Double studs are recommended for a stronger installation

Note: Use ADA bowls when using the ADA Brackets

Install Spring Clips to the back of the Face Board

Spring Clips should be installed with 12  $\frac{3}{4}$  inches between the top of the top bracket and the top of the bottom bracket

There will be some side to side allowance on the clip installation

Be sure to allow 1" clearance between the top of your Face Board and the bottom of the top portion of the bracket to allow the Face Board to slide up for removal