


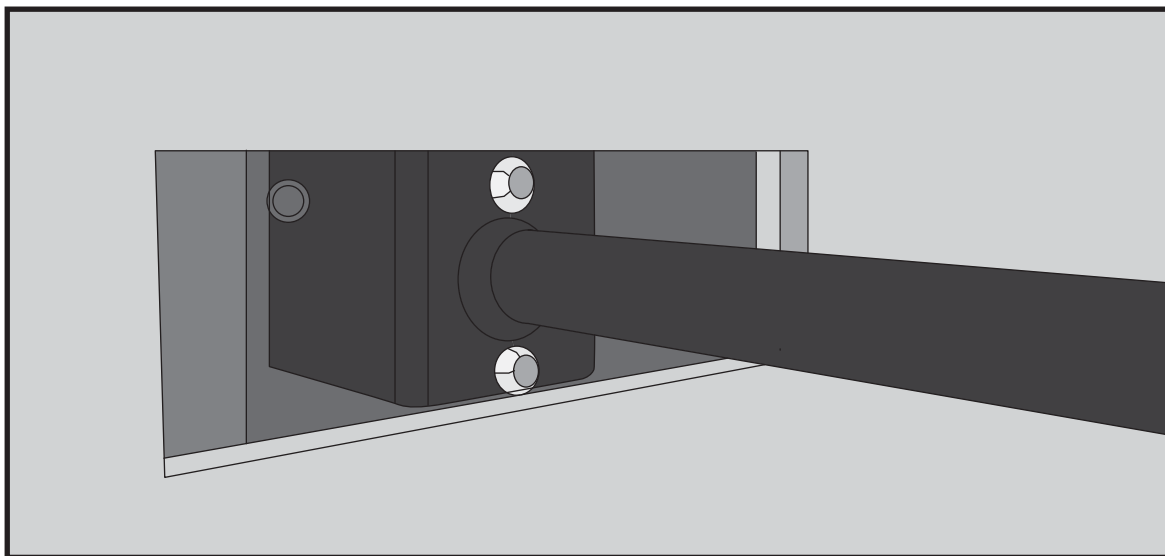

IVISIBLE SHELF BRACKET INSTALL

Invisible Shelf Bracket Install

1. Select the appropriate size bracket for your shelf surface. The overhang should be maximum of 3" longer than the bracket.
2. Locate the wall studs and hold the bracket directly over stud at the desired height, mark attachment point. (Brackets must be installed directly to wood studs or metal studs with wood blocking. Drywall anchors should not be used.)
3. Cut out drywall where bracket will attach.
4. Mark on the stud the locations of the holes to be drilled, set the bracket aside.
5. Drill 3/16" pilot holes on the marked locations. Place bracket back into position and secure with 1/4" lag bolts.
6. Check for level and shim if necessary.
7. Repeat for additional brackets. Brackets should be placed every 16 to 24" for optimum performance.
8. Apply a silicone sealant to the top of the brackets to secure the shelf surface to the brackets



A&M

HARDWARE, INC.

Call To Order (888) 647-0200

1165 Strickler Road, Mount Joy, PA 17552

www.AandMhardware.com